

POWERFLEX®

PART NUMBER

PFR1-111

DESCRIPTION

REAR PANHARD ROD BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 4 x Polyurethane Bushes
- 2 x Polyurethane Washers
- 2 x Stainless Steel Sleeves
- 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the Panhard rod from the vehicle and press out the original rubber bush, including the outer shell.
2. Clean any dirt and corrosion from the eyelet bores of the Panhard rod and remove any sharp edges or burrs with a rounded file.
3. Push the polyurethane washer into the centre of the rod eyelet.
4. Press the two polyurethane top hats in from either side of the rod eyelet. The polyurethane washer will find its place between the two.
5. Apply some of the supplied grease to the bore of the bushes.
6. Refit the Panhard rod to the vehicle and tighten all hardware to the manufacturer's recommended torque settings.

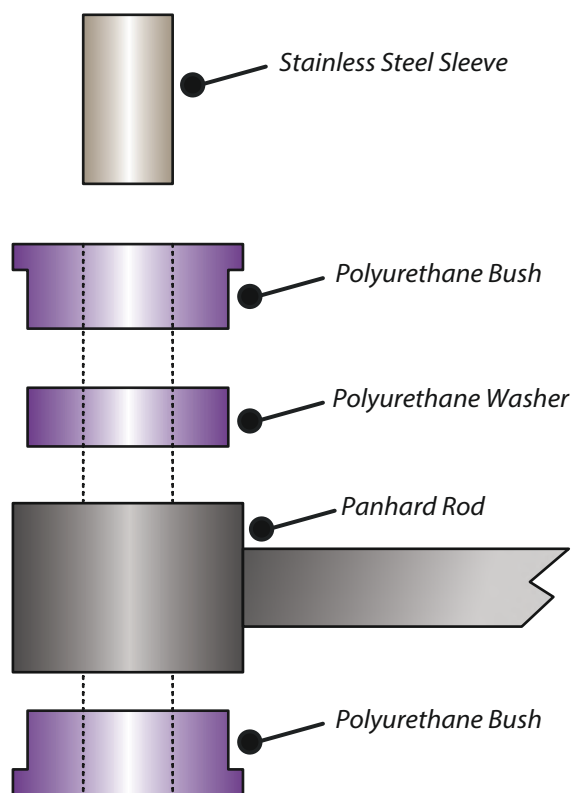


Figure 1