



PART NUMBER

PFR16-120

DESCRIPTION

REAR TRAILING ARM BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 4 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 4 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the original bush from the rear trailing arm including the outer shell, and clean away any dirt or corrosion. File away any sharp edges to prevent damaging the new bush.
2. Insert the new Powerflex bush into the rear trailing arm from the inside of the arm until flush as shown in Figure. 1, with both bushes facing outwards.
3. Apply some of the supplied grease to the stainless steel sleeve, bore of the bush, and end faces of the bush. Push the sleeve into the bush until flush at both ends.
4. Refit the trailing arm to the vehicle and tension all hardware to the manufacturer's recommended torque settings.

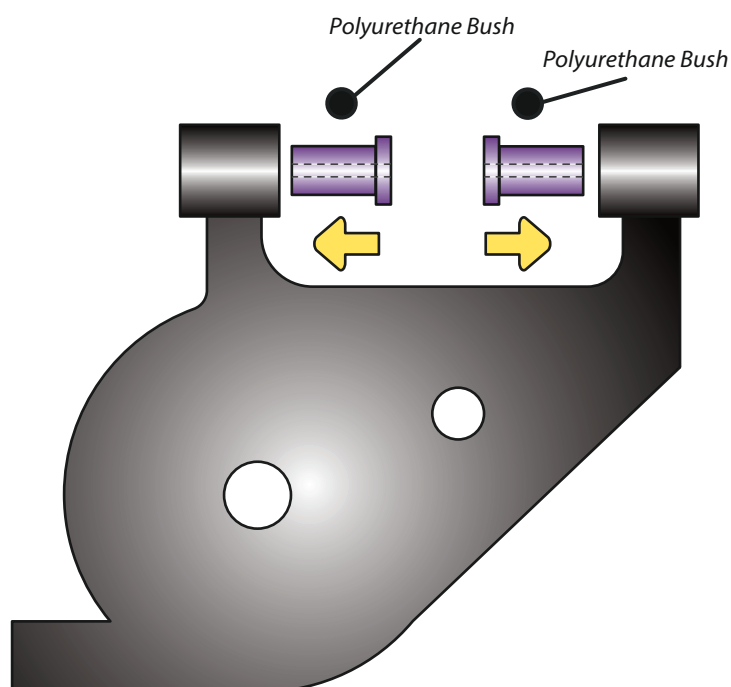


Figure 1 - Inserting the Polyurethane Bushes