

# POWERFLEX®

## PART NUMBER

# PFF30-303-24

## DESCRIPTION

### FRONT ANTI ROLL BAR INNER BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes    1 x PTFE/Silicone Grease

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

### Fitting Instructions:

1. Remove the original rubber bush from the anti roll bar, **make sure to retain the original metal collar, bracket and clamps for further use.**

**Note: the front anti roll bar is 24mm but the metal collar is 27.4mm, which the polyurethane part fits over. The collar is retained by clamps that prevent the bush and bracket from moving side to side.**

2. Clean any dirt and corrosion from the bracket and from the metal collar.

3. Fit the polyurethane part onto the front anti roll bar, sliding it over the metal collar so it sits in the middle.

4. Place the original bracket over the polyurethane part and bolt in place.

5. Place the original metal clamps over the metal collar and bolt in place.

6. Refit the front anti roll bar back to the vehicle and tension all hardware to manufacturers recommended torque settings.

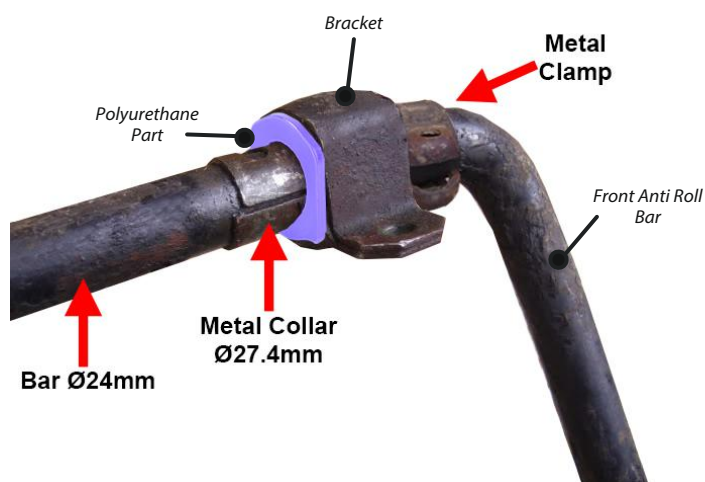


Figure 1