

POWERFLEX®

PART NUMBER

PFR12-511

DESCRIPTION

REAR LOWER ARM REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bushes from the rear position of the rear lower arm.

2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.

3. Press in the polyurethane bush into the bore of the arm and apply some of the supplied grease into the bore of the polyurethane bush, as shown in Figure 1.

4. Press in the stainless steel sleeve so that the smaller diameter end of the sleeve sits on the front side of the rear lower arm, as shown in Figure 1.

5. Refit the rear lower arm back to the vehicle and tension all hardware to manufacturers recommended torque settings.

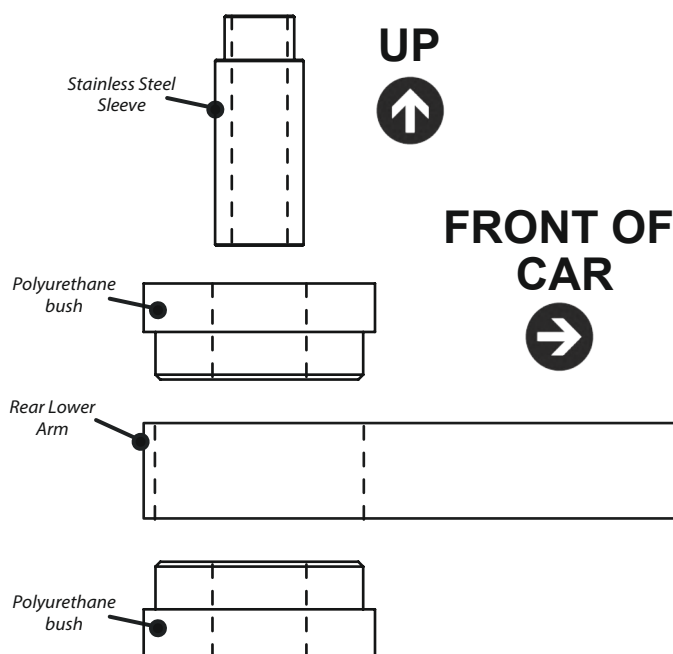


Figure 1