

POWERFLEX®

PART NUMBER

PFF5-225

DESCRIPTION

UPPER GEARBOX MOUNT INSERT

INSTALLATION GUIDE

Contents (parts per pack):

1 x Polyurethane Insert

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Support the gearbox from below with a jack or axle stand.
2. Remove the upper gearbox mount assembly from the vehicle.
3. Remove the nut holding the bracket to the gearbox mount and separate the parts.
4. Push the gearbox mount insert into the voiding in the rubber mounts. Ensure to orientate the insert so that the embossed logo and numbers are running across the car when the mount is in position (see Figure 1).
5. Reassemble the mount assembly, and then refit to the car.
6. Ensure you tighten all hardware to manufacturers' recommended torque settings.

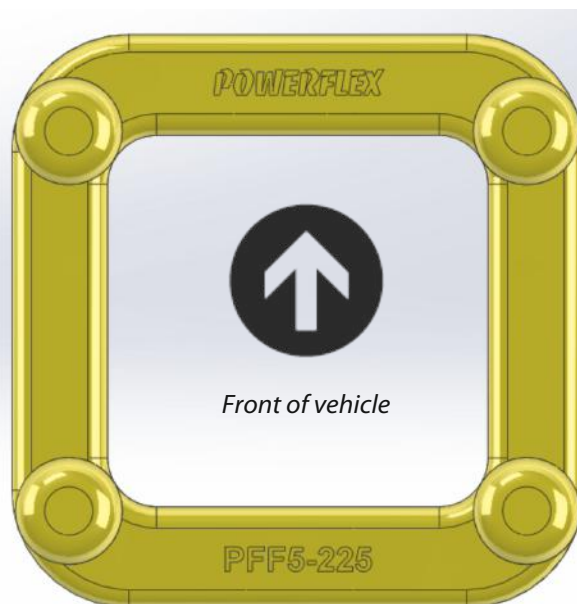


Figure 1: orientation of insert