

# POWERFLEX®

PART NUMBER

**PFF5-4652**

DESCRIPTION

**BMW Offset Lower Radiator Bush Kit**

## INSTALLATION GUIDE

### Contents (parts per pack):

1 x Polyurethane A Bush

1 x Polyurethane B Bush

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

Applicable to E46 only.

1. From underneath the vehicle, unclip the plastic mounting brackets that attach to the chassis frame rail, ensuring the radiator is supported
2. Place the replacement A bush on the left side of the radiator as shown in Fig 1 so that the offset bore is closer to the front of the vehicle. Push it onto the spigot of the radiator as shown in Fig 2.
3. Repeat on the other side of the radiator with the replacement B bush.
4. Place the plastic mounting clips removed earlier onto each bush and clip them back onto the frame rail.

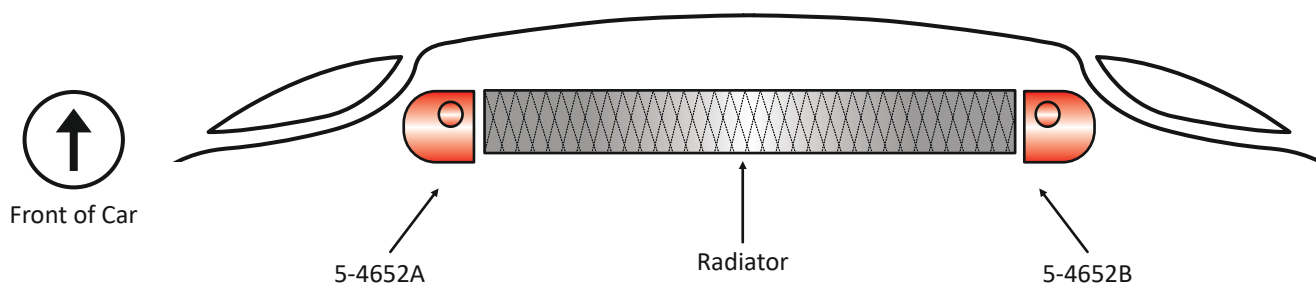


Figure 1



Figure 2



Figure 3

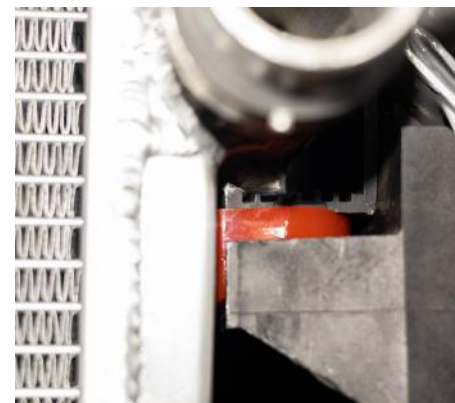


Figure 4